

# Check Temps

To check your Pi's current temp, use this command in the terminal:

```
vcgencmd measure_temp
```

---

Revision #1

Created 3 December 2021 00:06:46 by DB T3CH

Updated 3 December 2021 00:07:23 by DB T3CH